

FASTASHADE

Patrol Shelter Assembly Instructions: Page 1

To crew captains If you do not fully understand these instructions, YOU MUST NOT PUT UP THE SHELTER.

You can ring for assistance on:

0410 611 949 or 1800 818 421

For copies of these instructions and assembly videos visit



<http://www.beach-patrol-shade.com.au/>

#1: Site set-out - Aerial view

Dig a hole .6m deep and .5m long.


Place peg in hole at an angle of 45°

Sand Peg must be dug into hard sand which may be .5m below the top of the sand

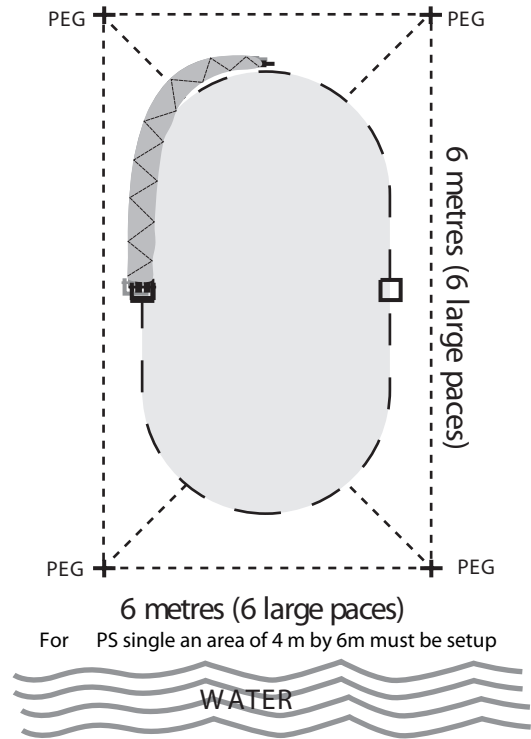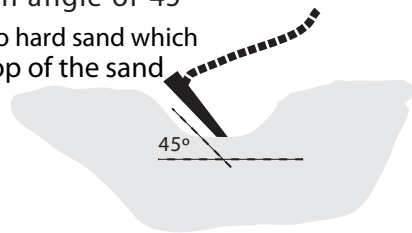


#2: Unpacking the shelter

Place J shaped shelter onto sand at centre of site.

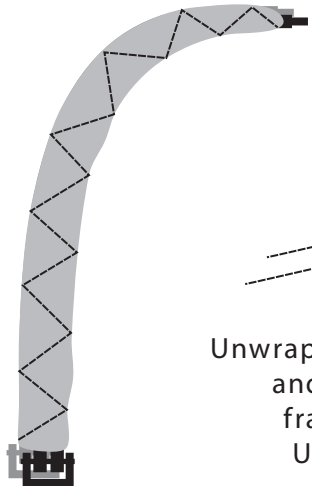


Unwrap ropes and open frame to U-shape

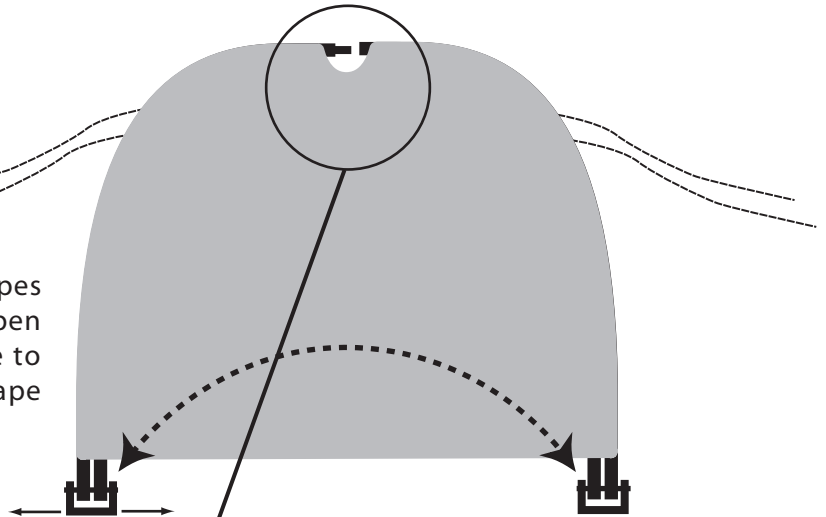

#3: Joining the arches

Two people should kneel at the top of the PS with one hand on the exposed pipe and the other on the fabric. Gather the fabric from the saddle bracket and push to the top of the pipe. Now pull the

pipe ends apart until their edges meet. Line the sleeve and collar up by moving the bottom ends to & fro. Push the pipes down flat to the ground, the collar will slide over the sleeve. Ensure collar fully covers the sleeve.

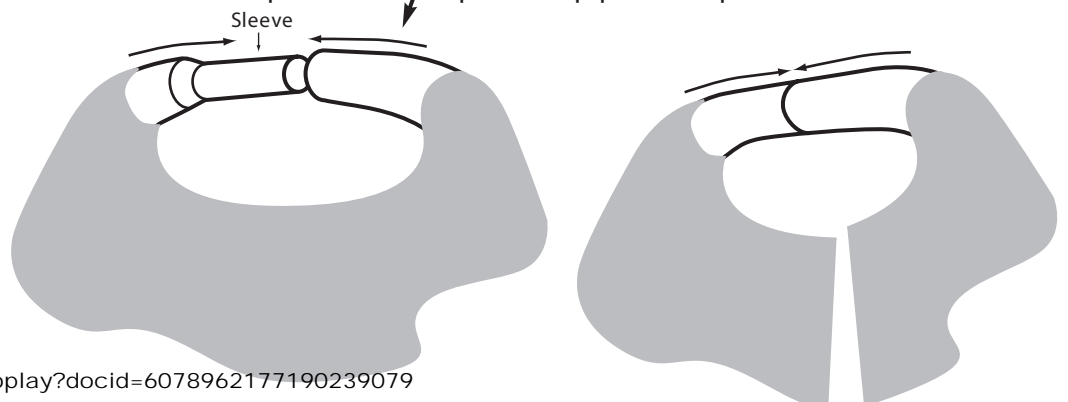

<http://video.google.com.au/videoplay?docid=6078962177190239079>


Two people should do this operation. Always make sure the pipe ends have cleared each other before you try to connect them, and never raise the ends upwards to create clearance!!

Patrol Shelter Assembly Instructions: Page 2

#4: Attaching guide ropes

IMPORTANT:

Attach ropes from bottom span to pegs. Leave approx 1/2 metre of rope to spare. These sand pegs must be buried in sand upto .5m above the head of the sand peg. Once secure and only then, can step 5 be done.

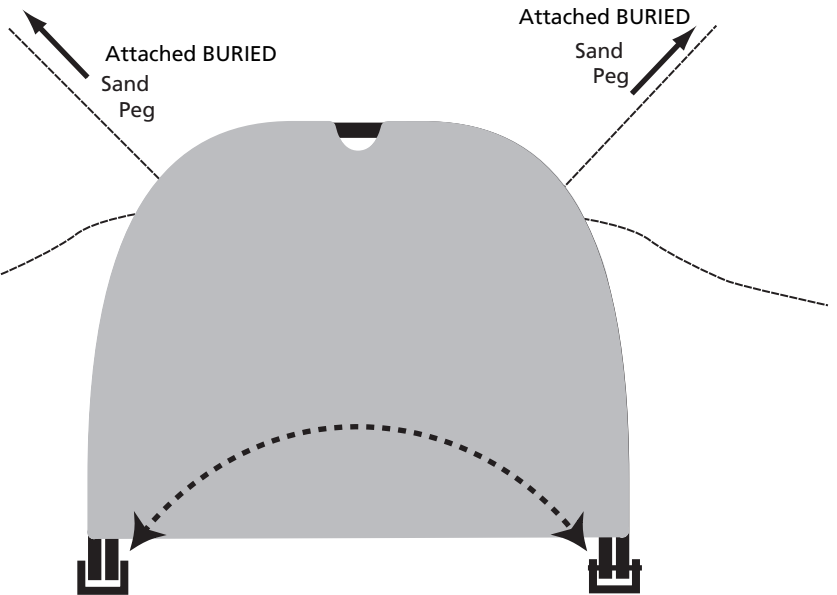

#5: Raising the shelter


Hold down the bottom arch to prevent shelter sliding and lift upper arch to assist crew on guide ropes. When half lift is reached, release bottom arch.

Pull up with wind direction



half lift

Pull up **EVENLY** on both sides. N.B. Uneven force can damage base hinge.

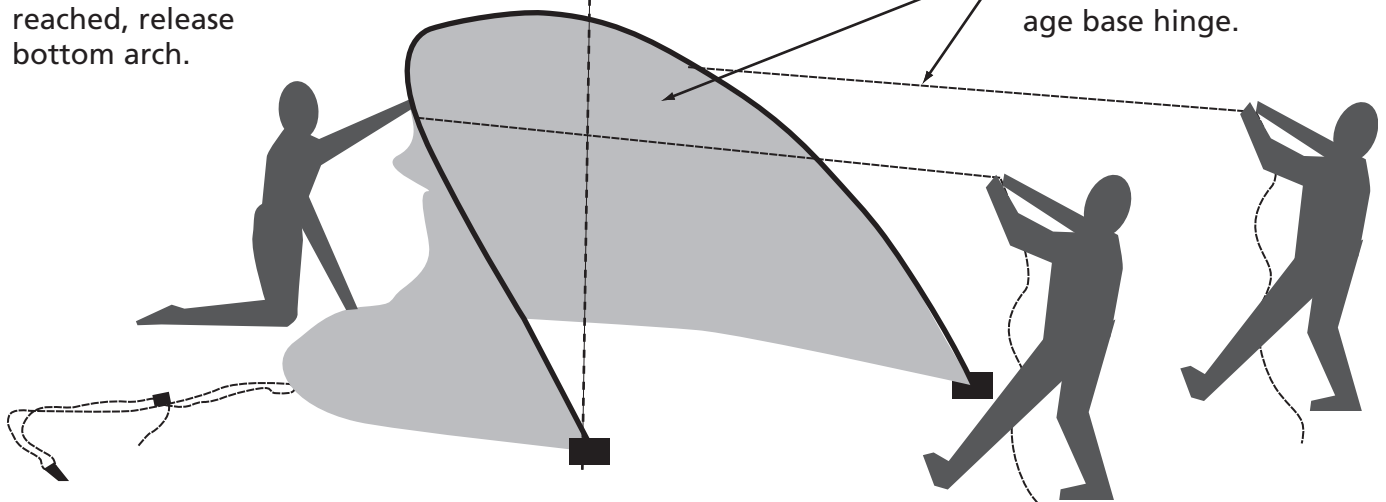


When shelter is upright and spread, attach ropes to front set of pegs

#6: Tightening the shelter

Tighten all 4 guide ropes to tension and balance shelter. *Unit must be tight at all times for optimum performance*

Shelter can be tilted in calm conditions

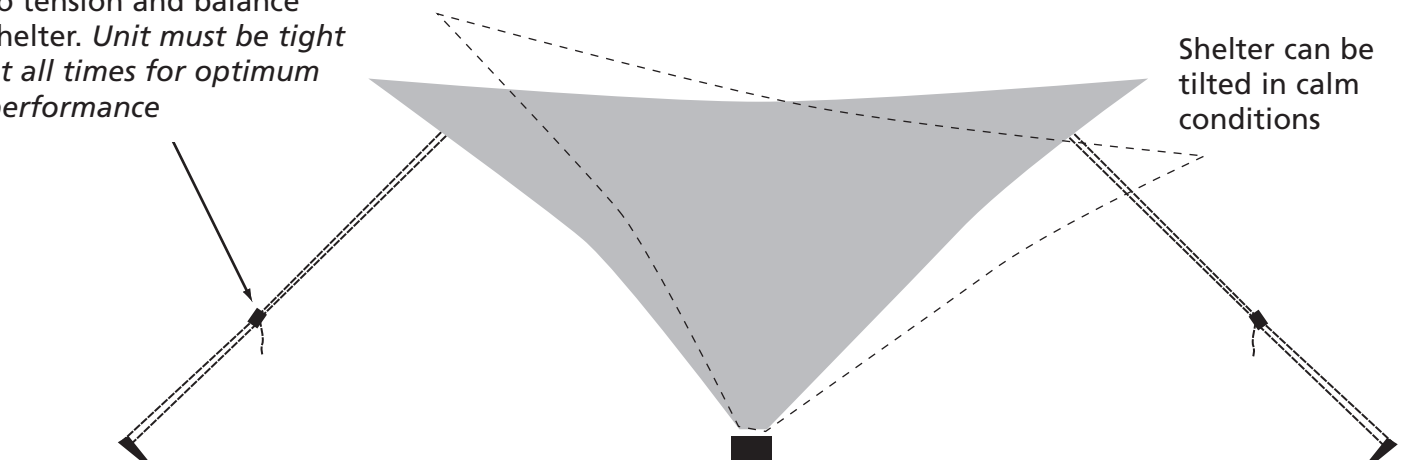


FASTASHADE

Patrol Shelter Dismantling Instructions: Page 3

#1: Release and lower

Unfasten 2 ropes at one end of the structure and allow it to fold down on itself gradually



IMPORTANT
Do not unfasten ropes at the other end until BPS is safely lying on the ground

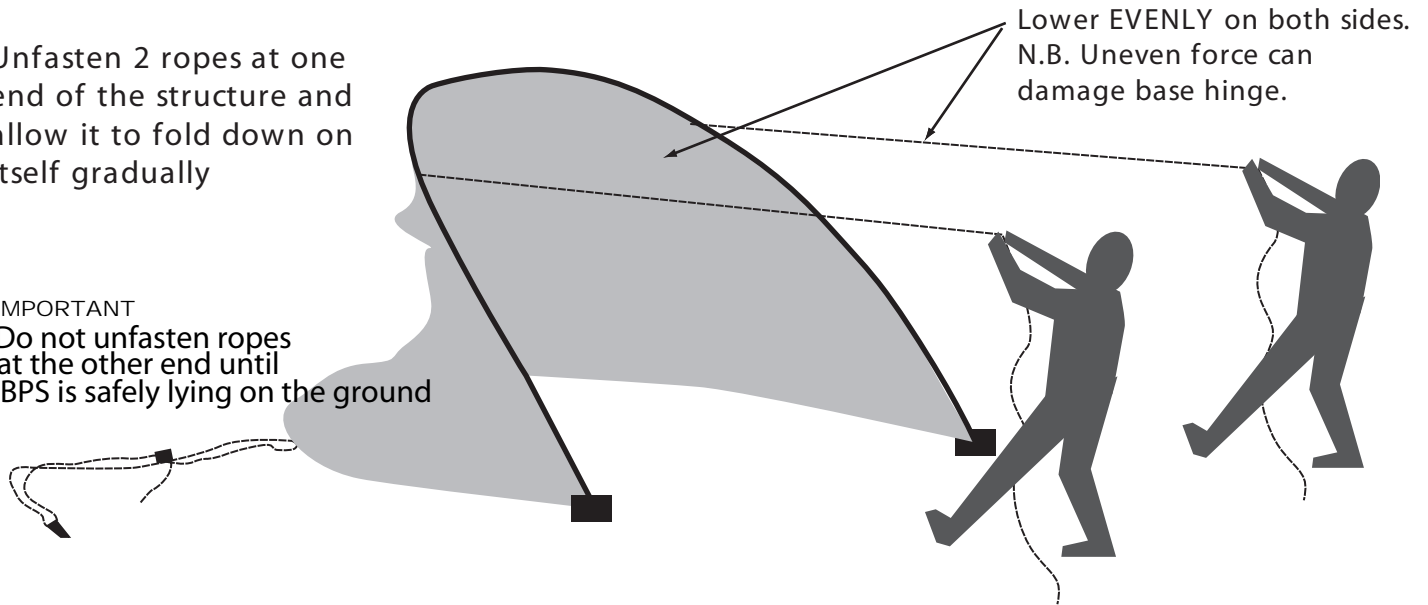

#5: Separating the arches

Separate the tops of the arches.

Gather the fabric from the saddle bracket and push to the top of the pipe. The pipes can now be pulled apart if the tops are accurately lined up with each other. Move the "legs" to and fro until the tops of the pipes are in line and flat on the ground. Do not lift up. Pull the tops apart (this will require 2 people at the top) Another person can help at the bottom of the pipes if they misalign.

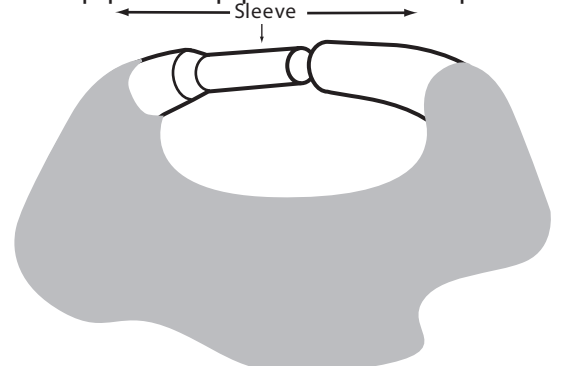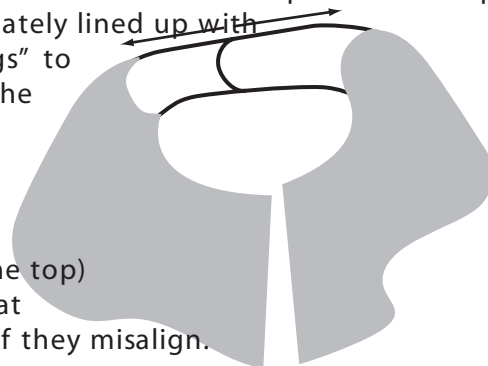

<http://video.google.com.au/videoplay?docid=8469094019351735167&q=source:012505602822444889915&hl=en>

#6: Wrapping the shelter

IMPORTANT: Only now can you unfasten the bottom two ropes
Detach the 2 underneath ropes from the pegs and pull out all 4 pegs. Fold the shelter over on itself to create a "banana" shape. Use the ropes to tie up the shelter in a cross-over pattern as shown.

